



Illustrated Parts List

Model Series

202400

TYPE NUMBERS
0033 through 0434.


TABLE OF CONTENTS

Air Cleaner	6
Alternator	10
Blower Housing/Shrouds	7
Camshaft	2
Carburetor #1	4
Carburetor #2	5
Controls	8
Crankcase Cover	2
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	9
Exhaust System	6
Flywheel	7
Fuel Supply	9
Gear Reducer	9
Governor Spring	8
Ignition	10
Kit/Gasket Sets-Carburetor	5
Kit/Gasket Sets-Engine	2
Kit/Gasket Sets-Valve	2
Lubrication	2
Piston, Rings, Connecting Rod	2
Rewind Starter	7
Valves	3


PRINTED IN U.S.A.




 
COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

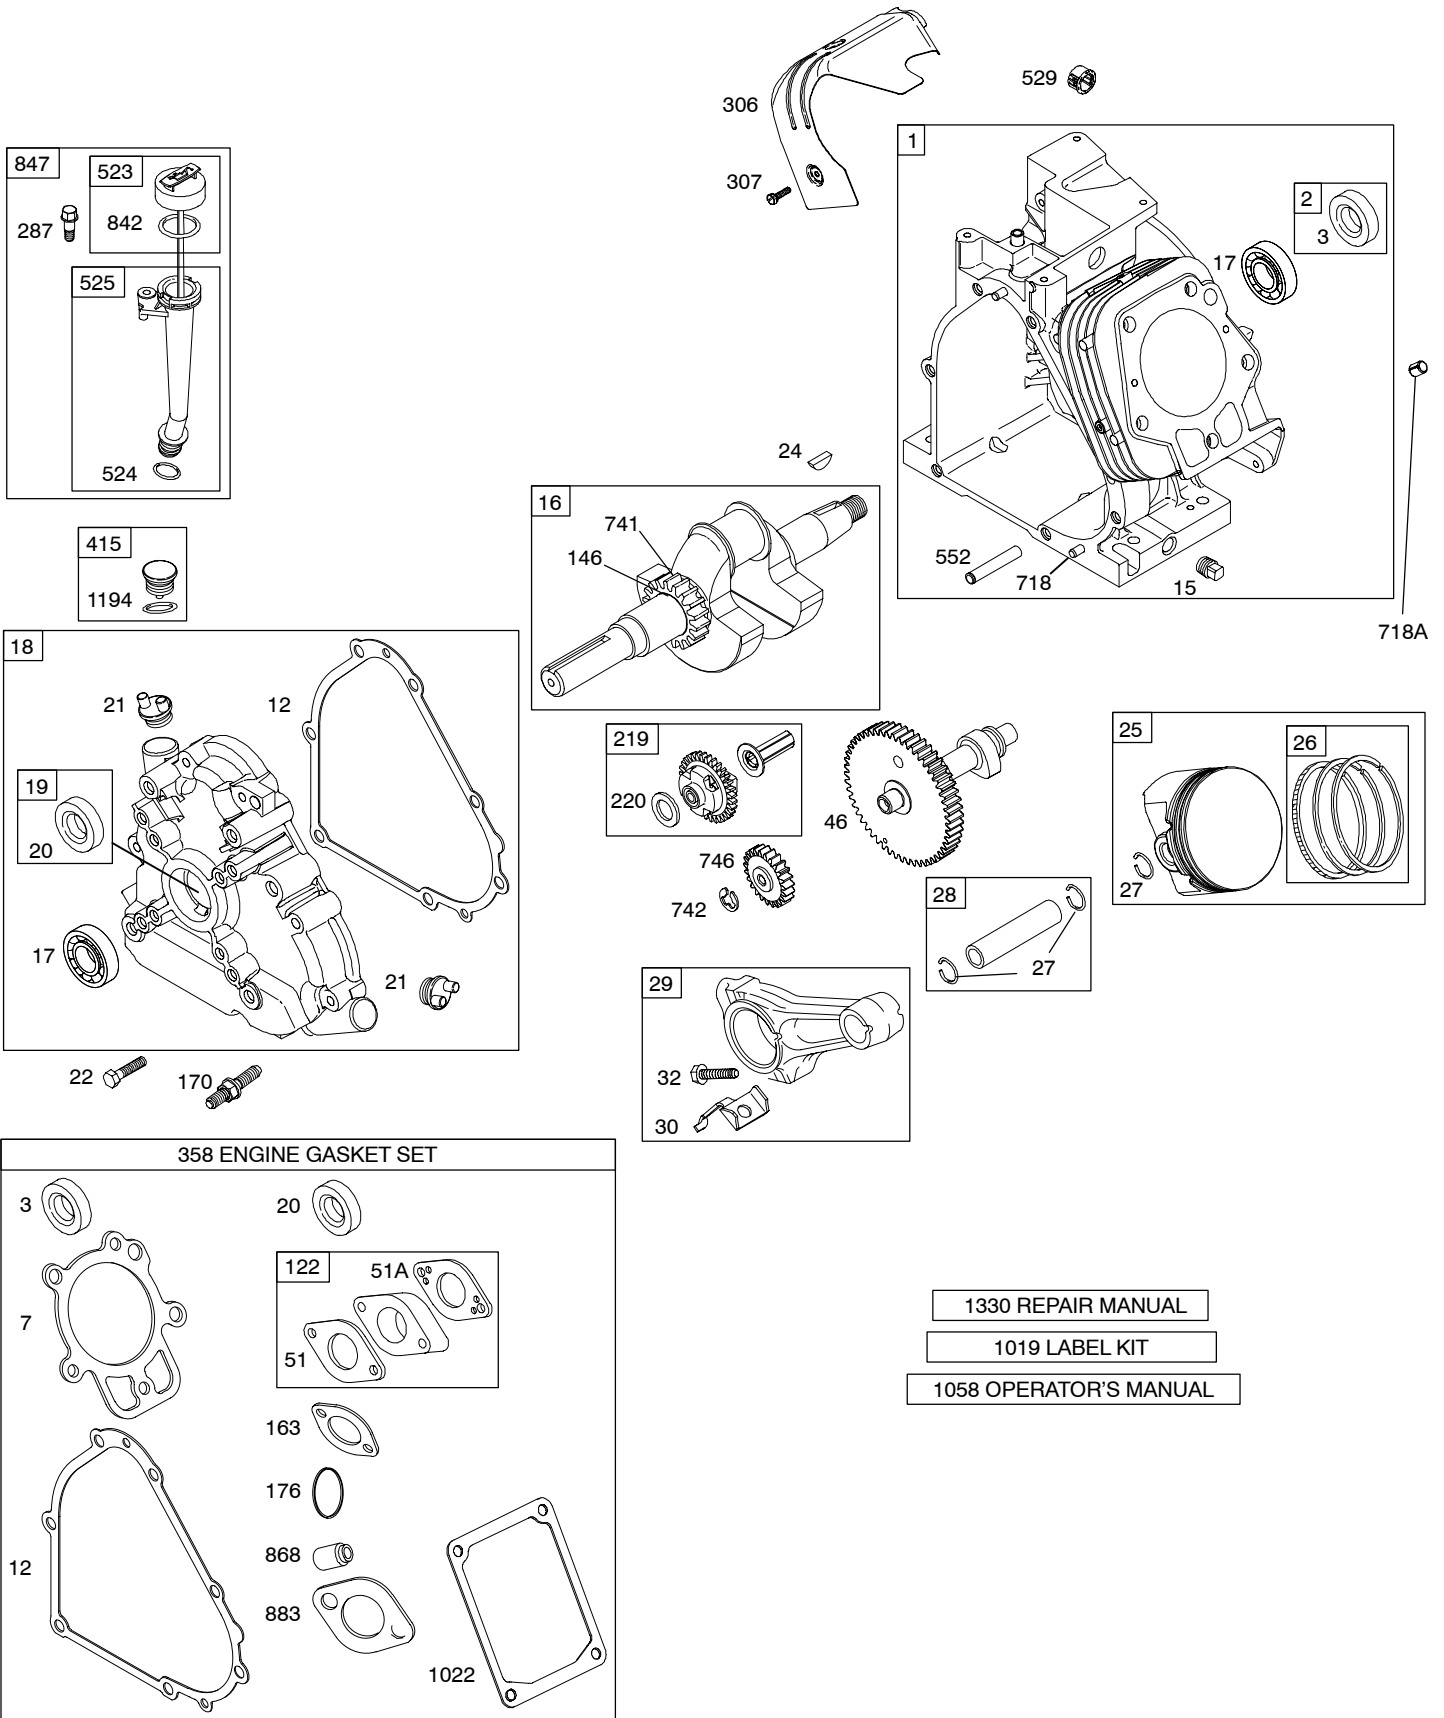








Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.
 6591-2 Assemblies include all parts shown in frames. 03/07/2006

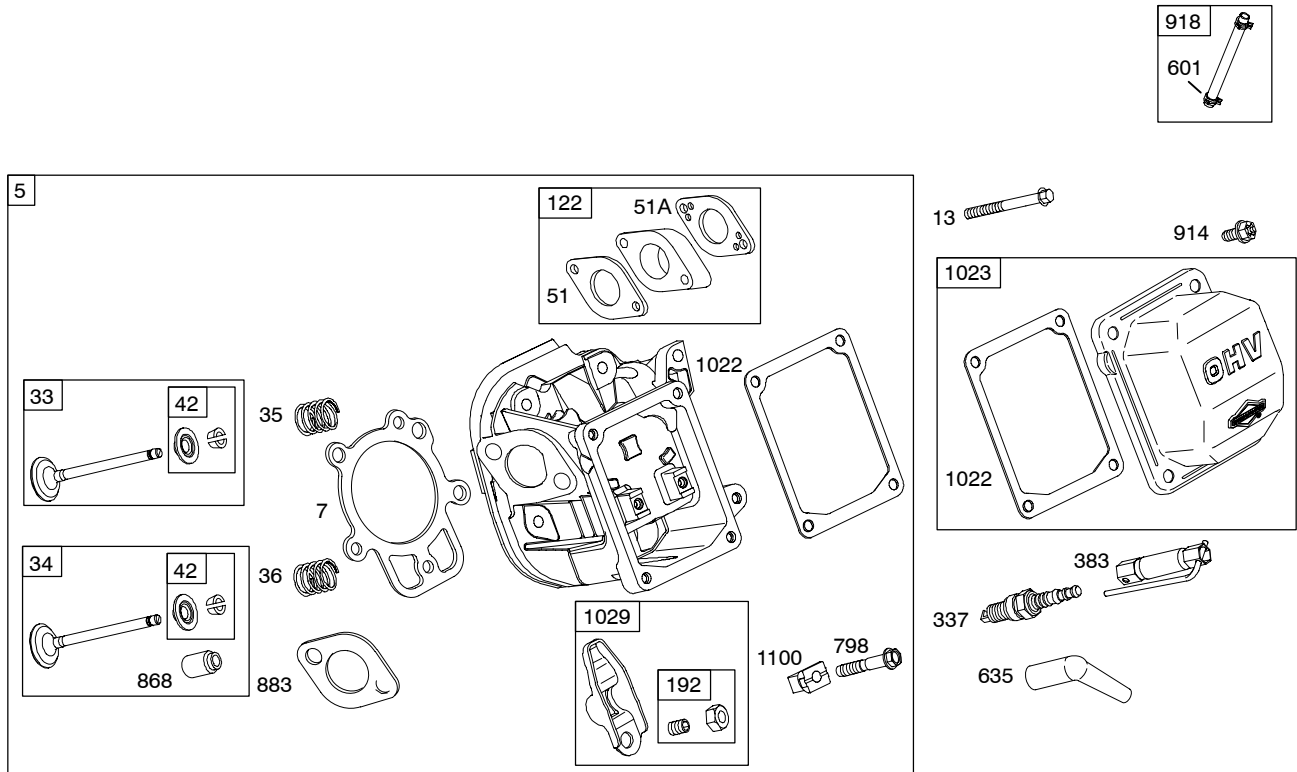 


Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.
 6591-3 Assemblies include all parts shown in frames. 03/07/2006

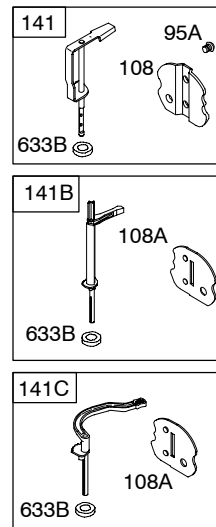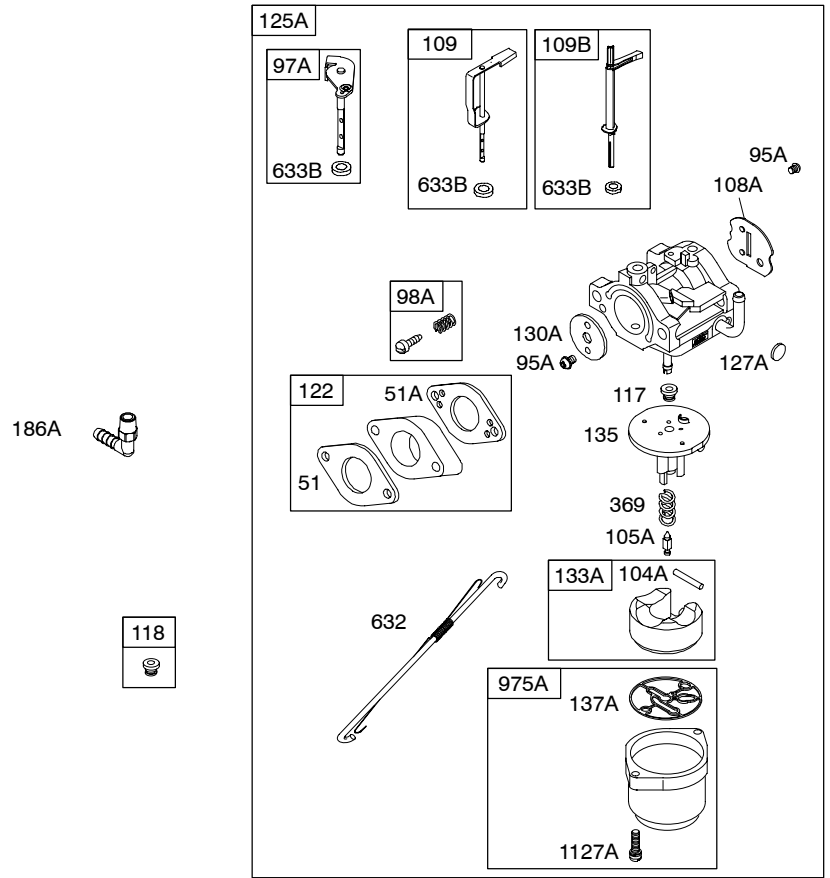  


Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.
 6591-4 Assemblies include all parts shown in frames. 03/07/2006

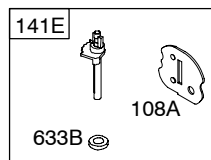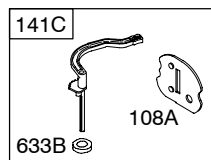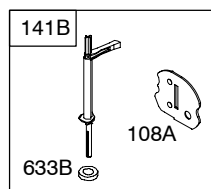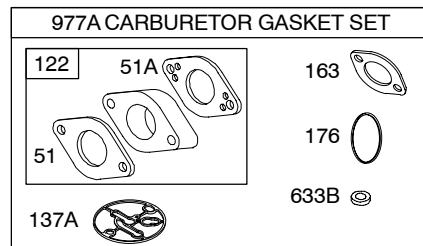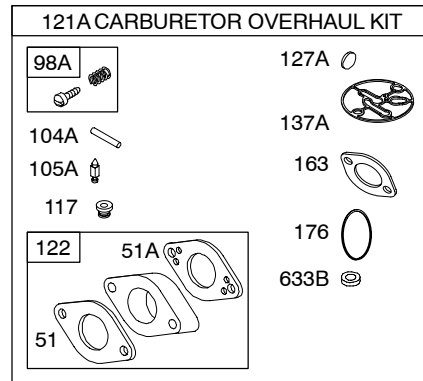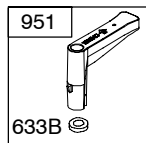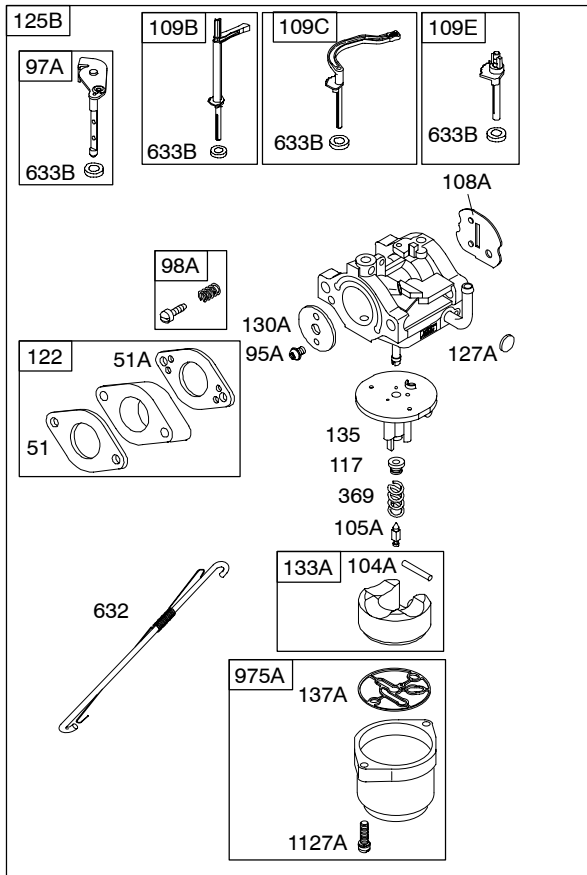       

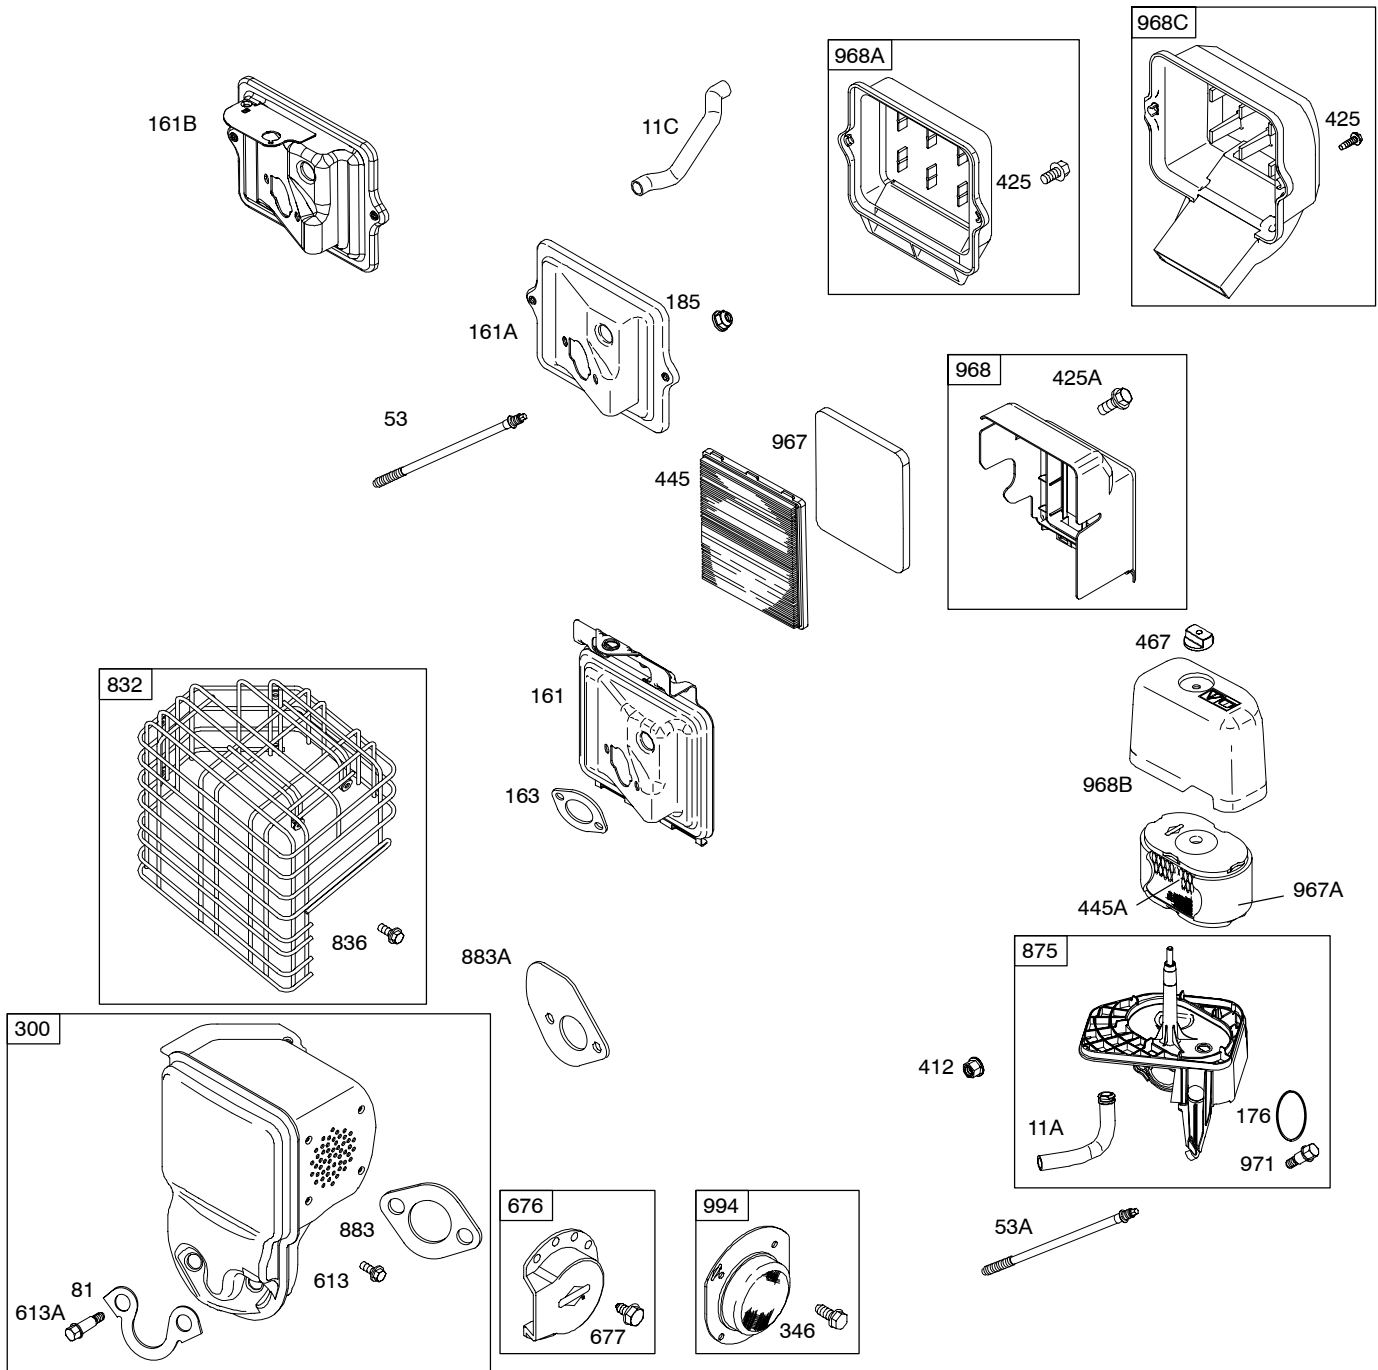 

Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.
6591-6 Assemblies include all parts shown in frames. **03/07/2006**

 1036 EMISSIONS LABEL

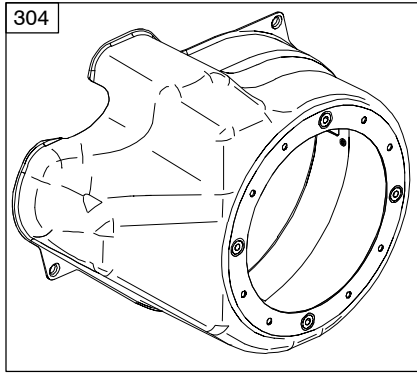

727



78



 
37




732



23

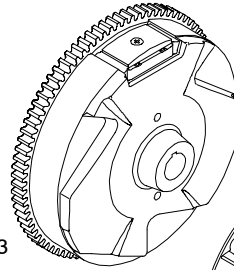

1005

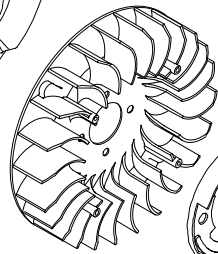 


1070



1006



 455

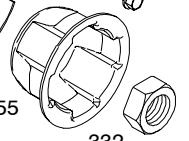

934



332



608

597



456



 
 
689



459




58

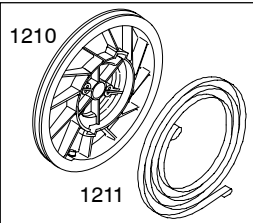

1210

1211

 60



59



 
592



 
 
 
 
 
 
 
 
 
 
65

 


55

 
 
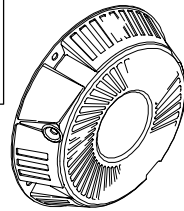 


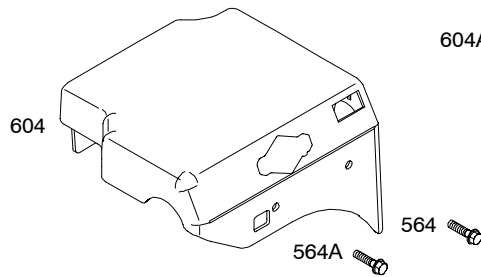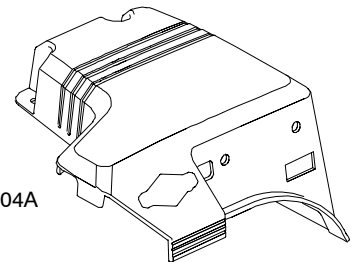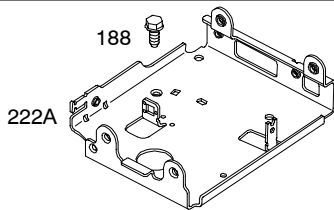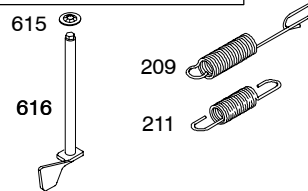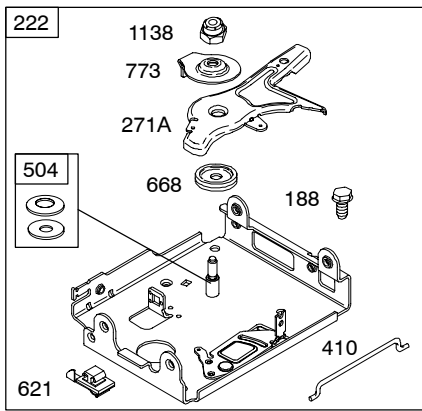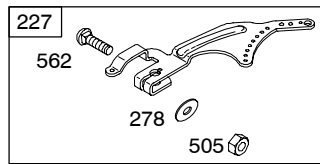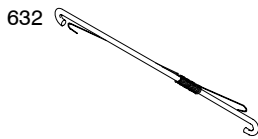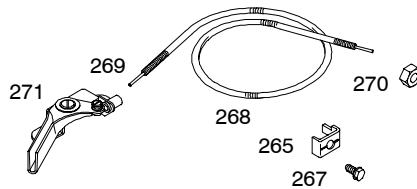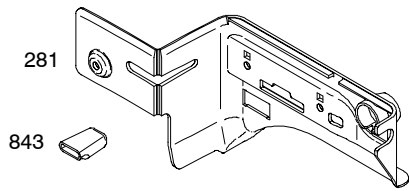


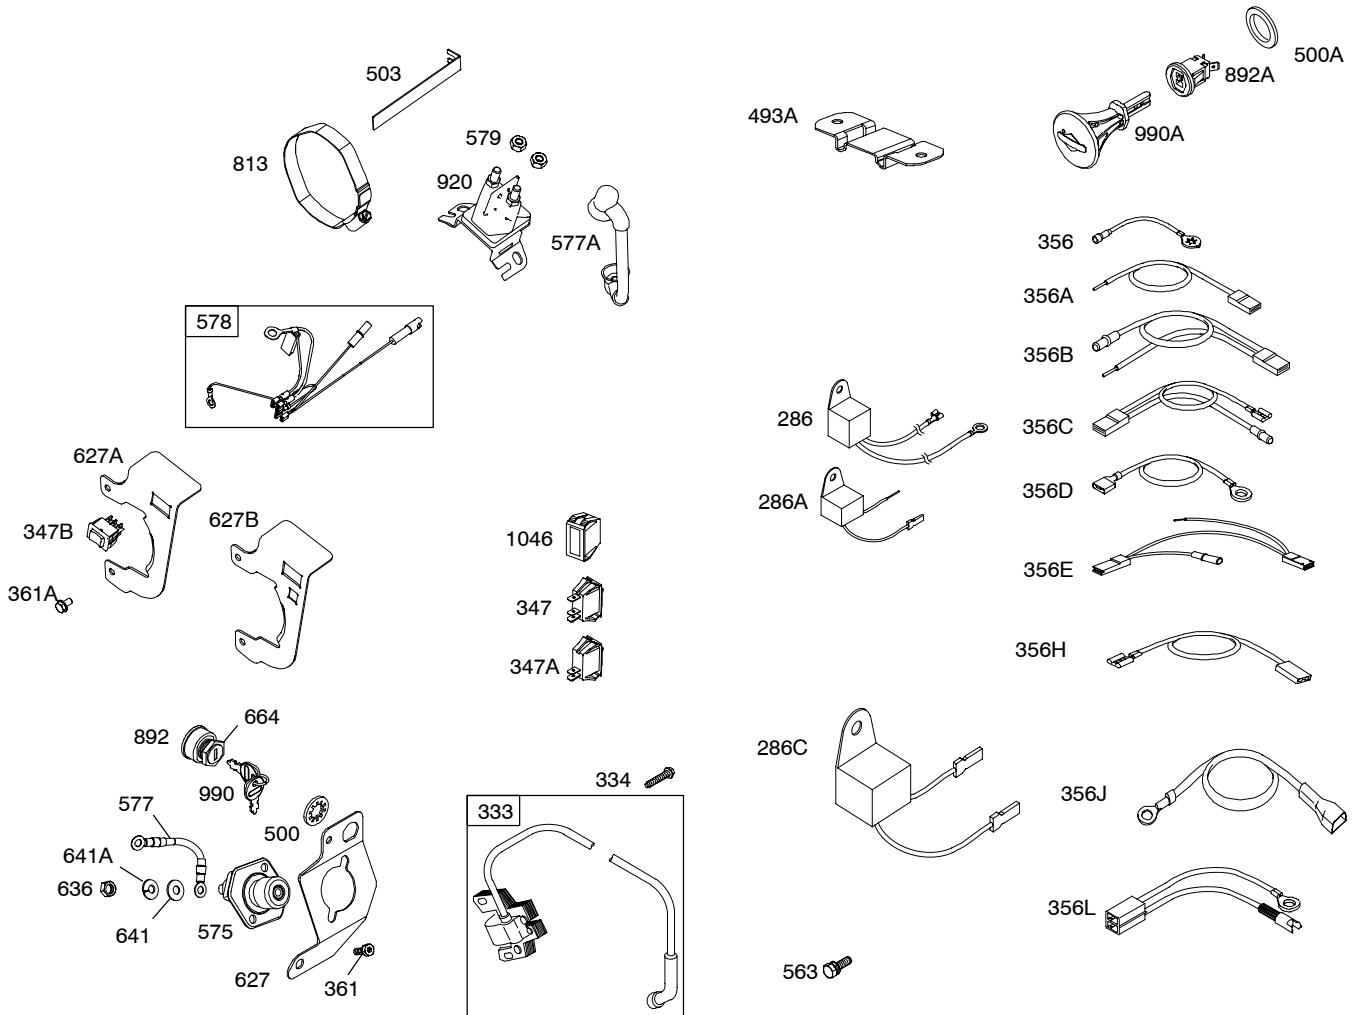 
Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.
 6591-7 Assemblies include all parts shown in frames. 03/07/2006

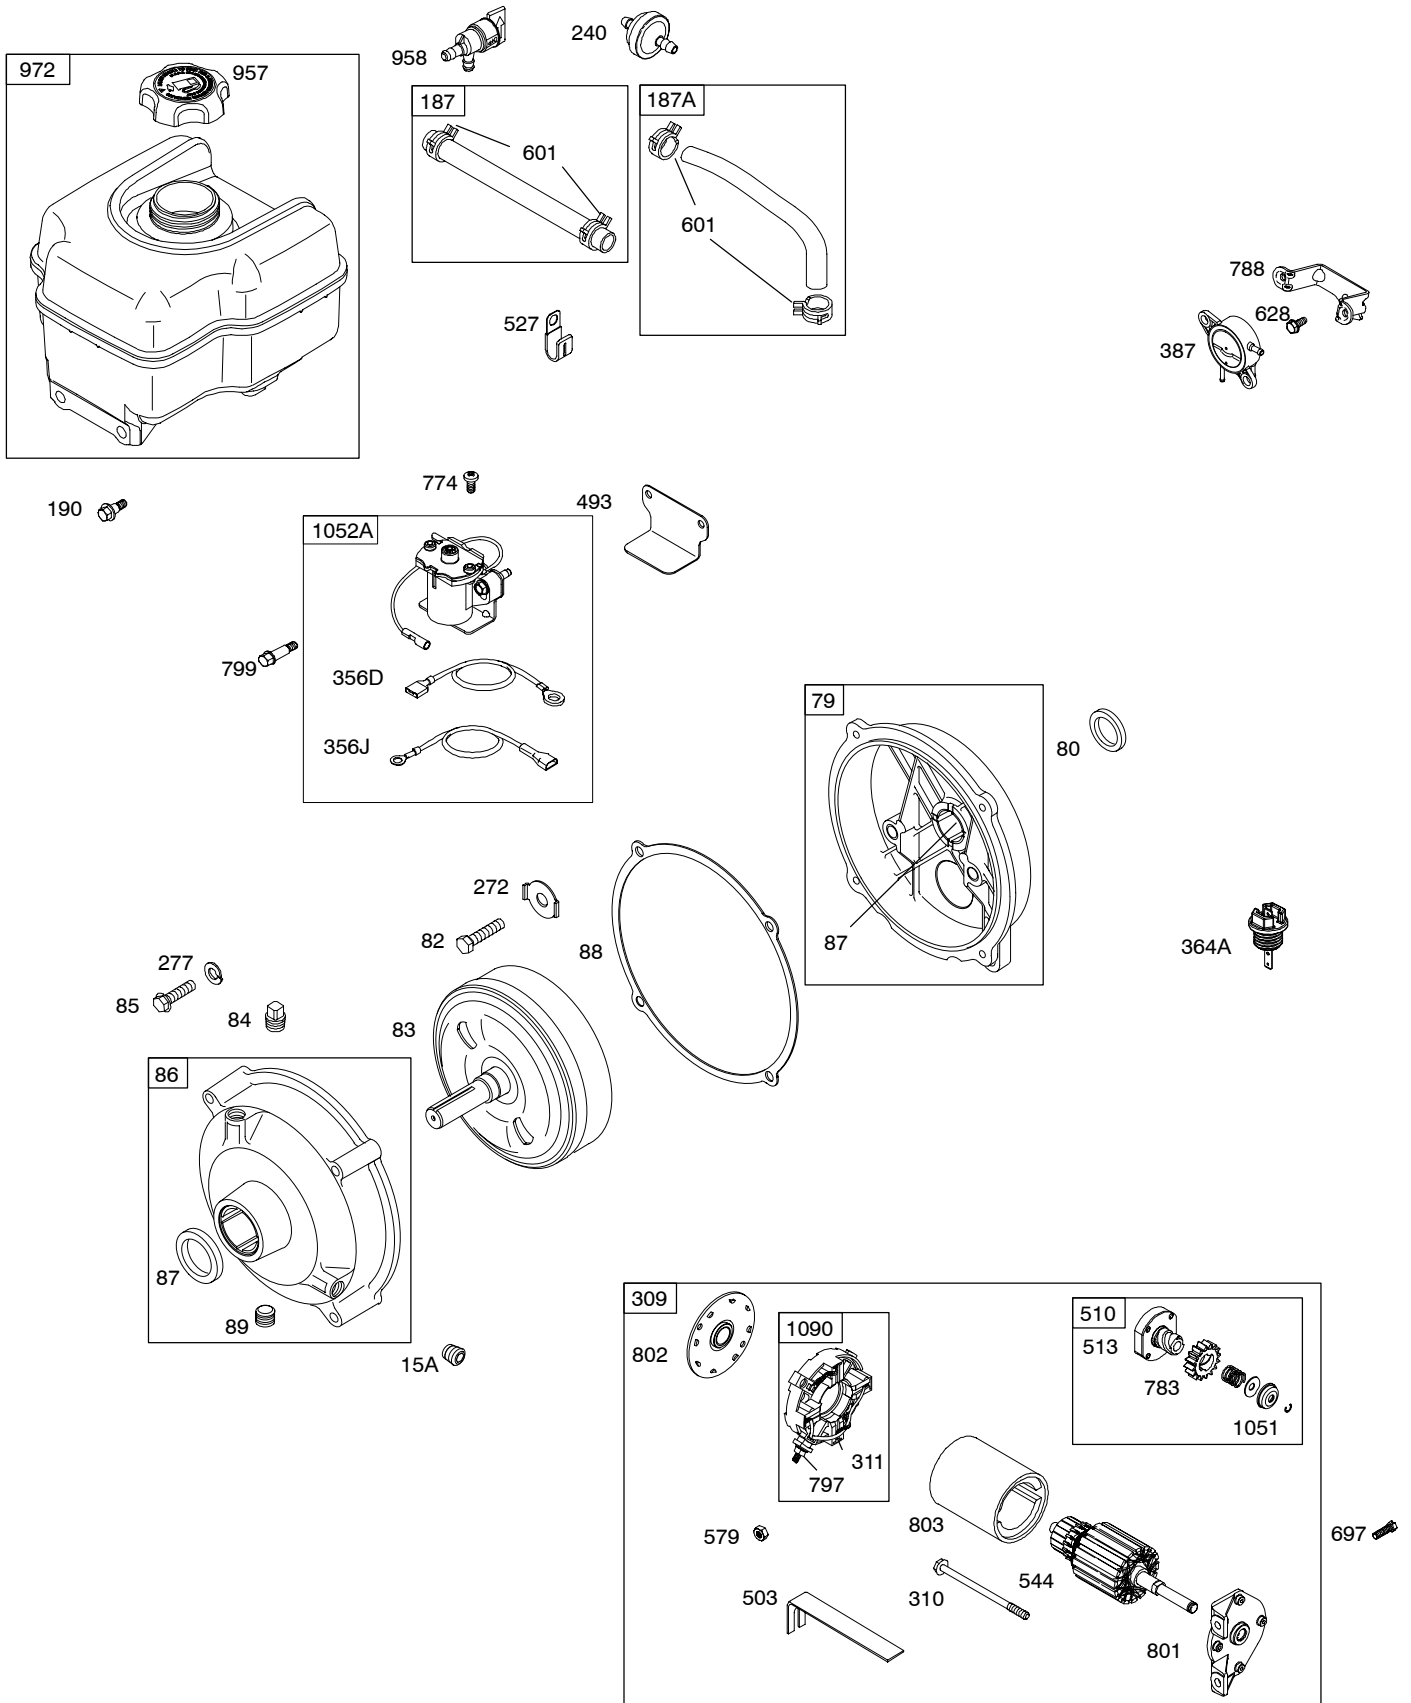

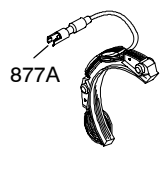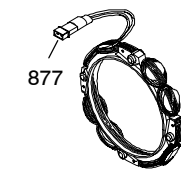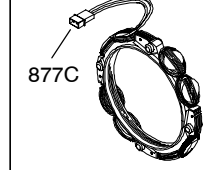

Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.
 6591-9 Assemblies include all parts shown in frames. 03/07/2006

DC ONLY	DUAL CIRCUIT	10 – 16 AMP
474A 	474B 	474D 
<p>NOTE: All stators use a No. 1119 mounting screw. </p> <p>NOTE: The proper flywheel part number and/or the alternator magnet size will determine the alternator type or output. See repair instruction manual for additional information.</p>		<p>526 </p> <p>501 </p>



Illustrations cover a range of engines. Parts shown without corresponding text are not used on this engine.
6591-10 Assemblies include all parts shown in frames. **03/07/2006**

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	696772	Cylinder Assembly (Used After Code Date 03072800) ----- Note ----- 694673 Cylinder Assembly (Used Before Code Date 03072900)	16	695369	Crankshaft ----- Note ----- 695817 Crankshaft Used on Type No(s). 0049, 0128, 0193. 695818 Crankshaft Used on Type No(s). 0035, 0123, 0152.	24	222698S	Key-Flywheel
2	698340	Kit-Bushing/Seal (Magneto Side)			694678 Crankshaft Used on Type No(s). 0118, 0121, 0132, 0149, 0151, 0157, 0158, 0161, 0167, 0168. 696412 Crankshaft Used on Type No(s). 0033, 0063. 695462 Crankshaft Used on Type No(s). 0114, 0116, 0119, 0133, 0134, 0136, 0148, 0150, 0156, 0160, 0171, 0175.	25	792117	Piston Assembly (Standard) ----- Note ----- 792144 Piston Assembly (.020" Oversize)
3	★391086S	Seal-Oil (Magneto Side)				26	792026	Ring Set (Standard) ----- Note ----- 792073 Ring Set (.020" Oversize)
5	697233	Head-Cylinder (Used After Code Date 01102800) ----- Note ----- 698040 Head-Cylinder (Used Before Code Date 01102900)	17	695434	Bearing-Ball	27	690975	Lock-Piston Pin
7	★△694872	Gasket-Cylinder Head	18	695372	Cover-Crankcase ----- Note ----- 695816 Cover-Crankcase (Gear Reduction) 696914 Cover-Crankcase Used on Type No(s). 0100, 0112, 0128, 0134, 0155, 0157, 0166, 0167, 0175.	28	696581	Pin-Piston
11A	695305	Tube-Breather Used on Type No(s). 0114, 0124, 0125, 0135, 0434.				29	694691	Rod-Connecting
11C	696796	Tube-Breather	19	698340	Kit-Bushing/Seal (PTO Side)	30	694692	Dipper-Connecting Rod
12	★694953	Gasket-Crankcase	20	★391086S	Seal-Oil (PTO Side)	32	690976	Screw (Connecting Rod)
13	690360	Screw (Cylinder Head)	21	281658S	Cap-Oil Fill	33	499596	Valve-Exhaust
15	691686	Plug-Oil Drain	22	695174	Screw (Crankcase Cover/Sump)	34	697464	Valve-Intake
15A	691682	Plug-Oil Drain	23	694954	Flywheel ----- Note ----- 695485 Flywheel Used on Type No(s). 0033, 0041, 0111, 0125, 0127, 0133, 0135, 0139, 0140, 0161, 0193.	35	694865	Spring-Valve (Intake)
						36	694865	Spring-Valve (Exhaust)
						37	790730	Guard-Flywheel Used on Type No(s). 0135, 0142.
						42	499586	Keeper-Valve
						45	690977	Tappet-Valve
						46	790496	Camshaft
						51	△★694874	Gasket-Intake
						51A	△★694875	Gasket-Intake
						53	694869	Stud (Carburetor)
						53A	695433	Stud (Carburetor) Used on Type No(s). 0114, 0124, 0125, 0135, 0166, 0175, 0434.

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

202400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
55	695288	Housing-Rewind Starter	98A	●695408	Kit-Idle Speed	125A	696132	Carburetor
58	693389	Rope-Starter (Cut To Required Length)	104A	●694918	Pin-Float Hinge			----- Note -----
59	805957	Insert-Grip	105A	●696136	Valve-Float Needle			696133 Carburetor
60	490652	Grip-Starter Rope	108	696143	Valve-Choke			Used on Type No(s). 0114, 0124, 0125, 0166, 0175, 0434.
65	690837	Screw (Rewind Starter)	108A	696209	Valve-Choke			697285 Carburetor
		----- Note -----	109	790077	Shaft-Choke (Used Before Code Date 04020500). Used on Type No(s). 0167, 0168.			Used on Type No(s). 0135.
		690759 Screw (Rewind Starter) Used on Type No(s). 0033, 0041, 0111, 0114, 0121, 0122, 0127, 0128, 0133, 0135, 0136, 0139, 0140, 0151, 0158, 0161, 0168.	109B	790149	Shaft-Choke			698786 Carburetor
		697725 Screw (Rewind Starter) Used on Type No(s). 0142, 0147.	109C	790148	Shaft-Choke (Used on Type No(s). 0114, 0124, 0125, 0135, 0166, 0434.	125B	699958	Carburetor (Used After Code Date 04020400) Used on Type No(s). 0157, 0158, 0167, 0168.
78	695724	Screw (Flywheel Guard) Used on Type No(s). 0135, 0142.	109E	696735	Shaft-Choke (Used After Code Date 04020400). Used on Type No(s). 0157, 0158, 0167, 0168.			----- Note -----
79	690614	Case-Gear Reduction	117	696134	Jet-Main (Standard)			698456 Carburetor (Used After Code Date 03063000 and Before Code Date 04020500). Used on Type No(s). 0167.
80	691603	Gasket-Gear Case	118	696135	Jet-Main (High Altitude)			699958 Carburetor (Used Before Code Date 03062900) Used on Type No(s). 0167.
81	695400	Lock-Muffler Screw	121A	696146	Kit-Carburetor Overhaul (Nikki)			699958 Carburetor (Used Before Code Date 04020500) Used on Type No(s). 0167.
82	690287	Screw (Gear Reduction Case)	122	▲◆694876	Spacer-Carburetor			698456 Carburetor (Used Before Code Date 04020500) Used on Type No(s). 0168.
83	690387	Shaft-Auxiliary Drive				127A	●690727	Plug-Welch
84	691121	Plug-Breather				130A	696139	Valve-Throttle
85	691076	Screw (Gear Cover to Gear Reduction Case)				133A	694914	Float-Carburetor
86	690613	Cover-Gear				135	696142	Tube-Fuel Transfer
87	391086S	Seal-Gear Reduction				137A	◆695426	Gasket-Float Bowl
88	691601	Gasket-Gear Reduction Cover				141	698457	Kit-Choke Shaft
89	690283	Plug-Oil				141B	696145	Kit-Choke Shaft
95A	690718	Screw (Throttle Valve)				141C	696144	Kit-Choke Shaft
97A	696140	Shaft-Throttle				141E	699979	Kit-Choke Shaft
		----- Note -----				146	690979	Key-Timing
		696387 Shaft-Throttle Used on Type No(s). 0140.						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
161	695384	Base–Air Cleaner (Metal)	188	690877	Screw (Control Bracket)	286	695186	Module–Oil Sensor (For Rewind Starter Engines)
161A	694870	Base–Air Cleaner (Metal) Used on Type No(s). 0167, 0168.	190	692127	Screw (Fuel Tank)			(Used Before Code Date 03010600).
161B	699960	Base–Air Cleaner	192	690083	Adjuster–Rocker Arm			Used on Type No(s). 0118, 0119, 0121, 0122, 0123, 0128, 0132, 0136, 0142, 0157, 0167.
163★◆	692277	Gasket–Air Cleaner	209	694867	Spring–Governor ----- Note ----- 695491	286A	699952	Module–Oil Sensor (Used After Code Date 03072300)
170	695296	Stud (Cover–Crankcase)			Spring–Governor Used on Type No(s). 0166. 696638			Used on Type No(s). 0133, 0156.
176	691917	Seal–O Ring (Air Cleaner Base) Used on Type No(s). 0114, 0124, 0125, 0135, 0166, 0175, 0434.	211	695307	Spring–Governed Idle			696058 Module–Oil Sensor
185	690958	Nut (Air Cleaner Base)	219	693578	Gear–Governor			(Used Before Code Date 03010600).
186A	696612	Connector–Hose Used on Type No(s). 0135. ----- Note ----- 691764	220	691724	Washer (Governor Gear)	286C	699951	Module–Oil Sensor (Used After Code Date 03010500)
		Connector–Hose Used on Type No(s). 0140.	222	695380	Bracket–Control			Used on Type No(s). 0133.
			222A	694866	Bracket–Control Used on Type No(s). 0121, 0132, 0151, 0157, 0158, 0166, 0167, 0161, 0168.			Used on Type No(s). 0118, 0119, 0121, 0122, 0123, 0128, 0132, 0136, 0142, 0147, 0149, 0150, 0152, 0157, 0158, 0167, 0168, 0171.
187	791766	Line–Fuel (Cut to Required Length) (Used After Code Date 05063000) ----- Note ----- 691050 Line–Fuel (Used Before Code Date 05070100) (Cut To Required Length) 791745 Line–Fuel (Used After Code Date 05063000) (Cut to Required Length) Used on Type No(s). 0140.	222B	791753	Bracket–Control	287	691693	Screw (Dipstick Tube)
			227	694864	Lever–Governor Control	300	697252	Muffler (Used After Code Date 02012000) ----- Note ----- 695311 Muffler (Used Before Code Date 02012100)
			240	394358S	Filter–Fuel	304	791479	Housing–Blower (Used After Code Date 01102800) ----- Note ----- 791478 Housing–Blower (Used Before Code Date 01102900)
			265	691024	Clamp–Casing			
			267	692577	Screw (Casing Clamp)			
			268	691025	Casing–Control Wire (Cut To Required Length)			
			269	691026	Wire–Control (Cut To Required Length)			
			270	691027	Nut (Control Wire Casing)			
			271	691028	Lever–Control			
			271A	695381	Lever–Control			
			272	691168	Lock–Screw Head			
			277	691075	Washer (Gear Case To Gear Reduction)			
			278	792008	Washer (Governor Control Lever)			
			281	697268	Panel–Control (Used After Code Date 01102800) ----- Note ----- 695294 Panel–Control (Used Before Code Date 01102900)			
187A	791869	Line–Fuel (Used After Code Date 05070100) 695429 Line–Fuel (Used Before Code Date 05063000)						

★ Included in Engine Gasket Set–Ref. No.358.

● Included in Carburetor Overhaul Kit–Ref. No. 121.

◆ Included in Carburetor Gasket Set–Ref. No. 977.

△ Included in Valve Gasket Set–Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

202400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
305	691108	Screw (Blower Housing)	356	692603	Wire-Stop	358	695438	Gasket Set-Engine
306	697240	Shield-Cylinder (Used After Code Date 01102800)	356A	692390	Wire-Stop	361	691681	Screw (Starting Switch) Used on Type No(s). 0041, 0140.
		----- Note -----	356B	695815	Wire-Stop	361A	691693	Screw (Starting Switch)
		694677 Shield-Cylinder (Used Before Code Date 01102900)	356C	695295	Wire-Stop	364A	699947	Terminal-Oil Plug
307	691660	Screw (Cylinder Shield)	356D	695366	Wire-Stop (Used Before Code Date 03072400). Used on Type No(s). 0118, 0119, 0121, 0122, 0123, 0128, 0132, 0136, 0142, 0147, 0157, 0167, 0168, 0171.	369	695422	Spring-Float Bowl
309	695479	Motor-Starter			----- Note -----	383	19374	Wrench-Spark Plug
310	690323	Screw (Starter Motor)			699077 Wire-Stop (Used Before Code Date 03082800). Used on Type No(s). 0133.	387	808656	Pump-Fuel Used on Type No(s). 0135, 0140.
311	497608	Brush Set	356E	696328	Wire-Stop Used on Type No(s). 0041.	410	695382	Link-Control
332	694685	Nut (Flywheel)	356H	696482	Wire-Stop Used on Type No(s). 0127.	412	690958	Nut (Air Cleaner Cover) Used on Type No(s). 0125, 0434.
333	715231	Armature-Magneto			----- Note -----	415	691363	Plug
334	691061	Screw (Magneto Armature)			695366 Wire-Stop (Used Before Code Date 03082800). Used on Type No(s). 0133.	425	694515	Screw (Air Cleaner Cover)
337	691043	Plug-Spark	356J	699994	Wire-Stop (Used After Code Date 03072300). Used on Type No(s). 0118, 0119, 0121, 0122, 0123, 0128, 0132, 0136, 0142, 0147, 0149, 0150, 0151, 0152, 0157, 0158, 0167, 0168, 0171.	425A	790043	Screw (Air Cleaner Cover) Used on Type No(s). 0033.
346	690661	Screw (Spark Arrestor)			----- Note -----	445	491588	Filter-Air Cleaner Cartridge
		----- Note -----			699077 Wire-Stop Used on Type No(s). 0140.	445A	695302	Filter-Air Cleaner Cartridge Used on Type No(s). 0114, 0124, 0125, 0135, 0166, 0175, 0434.
347	698338	Switch-Rocker			699994 Wire-Stop (Used After Code Date 03082700). Used on Type No(s). 0133.	455	694683S	Cup-Flywheel
347A	697854	Switch-Rocker Used on Type No(s). 0118, 0119, 0121, 0122, 0123, 0128, 0132, 0136, 0142, 0147, 0149, 0150, 0151, 0152, 0157, 0158, 0161, 0167, 0168, 0171.	356L	792609	Wire-Stop	456	692299	Plate-Pawl Friction
347B	790949	Switch-Rocker			----- Note -----	459	281505S	Pawl-Ratchet
					699994 Wire-Stop (Used After Code Date 03082700). Used on Type No(s). 0133.	467	691668	Knob-Air Cleaner Used on Type No(s). 0114, 0124, 0125, 0135, 0166, 0175.
					----- Note -----	474A	695730	Alternator (3 Amps DC) Used on Type No(s). 0033, 0139.
					699994 Wire-Stop (Used After Code Date 03082700). Used on Type No(s). 0133.	474B	696742	Alternator (Dual Circuit) Used on Type No(s). 0135.
					----- Note -----	474D	695466	Alternator (10 Amp Regulator)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
493	694861	Bracket-Mounting (Oil Sensor) ----- Note ----- 699075 Bracket-Mounting (Oil Sensor) Used on Type No(s). 0142, 0147.	564	692577	Screw (Control Cover)	632	696059	Link-Throttle
493A	691177	Bracket-Mounting (Regulator)	564A	692198	Screw (Control Cover)	633B	690998	Seal-Choke/Throttle Shaft
500	691086	Washer (Key Switch) Used on Type No(s). 0041, 0140.	575	692303	Switch-Starting Used on Type No(s). 0041, 0140.	635	710901	Boot-Spark Plug
500A	792613	Washer (Key Switch)	577	690630	Cable-Starter Used on Type No(s). 0041, 0127, 0140.	636	696198	Nut (Starting Switch) Used on Type No(s). 0041, 0127, 0140.
501	691185	Regulator	577A	690795	Cable-Starter	641	691075	Washer (Starting Switch) Used on Type No(s). 0041, 0049, 0127, 0128, 0140.
503	691532	Strap-Starter	578	790948	Wire Assembly	641A	690282	Washer (Starting Switch) Used on Type No(s). 0140.
504	695383	Washer Set-Friction	579	691029	Nut (Starter Cable)	663A	690372	Screw (Control Panel) Used on Type No(s). 0033, 0111, 0125, 0127, 0133, 0139, 0140.
505	691251	Nut (Governor Control Lever)	592	690800	Nut (Rewind Starter)	663B	692577	Screw (Control Panel) Used on Type No(s). 0041, 0100.
510	693699	Drive-Starter	597	691696	Screw (Pawl Friction Plate)	664	691087	Nut (Key Switch) Used on Type No(s). 0041, 0140.
513	692024	Clutch-Drive	601	95162	Clamp-Hose	668	694257	Spacer (Control Bracket)
523	695344	Dipstick	604	699066	Cover-Control Used on Type No(s). 0140. ----- Note ----- 697326 Cover-Control Used on Type No(s). 0168.	676	393761	Deflector-Muffler Used on Type No(s). 0114, 0116, 0121, 0122, 0132, 0142, 0147, 0151, 0161, 0434.
524	691876	Seal-Dipstick Tube	604A	791752	Cover-Control	677	690367	Screw (Deflector-Mounting) Used on Type No(s). 0114, 0116, 0122, 0132, 0132, 0142, 0147, 0434.
525	695343	Tube-Dipstick	608	695287	Starter-Rewind			
526	690297	Screw (Regulator)	613	695312	Screw (Muffler)			
527	698467	Clamp-Tube Used on Type No(s). 0140.	613A	695399	Screw (Muffler)			
529	791822	Grommet	615	694676	Retainer-Governor Shaft			
544	692034	Armature-Starter	616	694675	Crank-Governor			
552	694674	Bushing-Governor Crank	621	692310	Switch-Stop			
562	691119	Bolt (Governor Control Lever)	627	696064	Bracket-Stopswitch Used on Type No(s). 0041, 0140.			
563	695449	Screw (Debris Screen Guard) Used on Type No(s). 0142, 0147.	627A	790952	Bracket-Stopswitch			
			627B	792608	Bracket-Stopswitch			
			628	690297	Screw (Fuel Pump Bracket) Used on Type No(s). 0140.			

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

202400

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
689	691855	Spring-Friction	843	695588	Sleeve-Lever	968	697061	Cover-Air Cleaner
697	690372	Screw (Drive Cap)	847	695342	Dipstick/Tube Assembly	968A	692321	Cover-Air Cleaner Used on Type No(s). 0167, 0168.
718	690959	Pin-Locating	868	★△690968	Seal-Valve	968B	695301	Cover-Air Cleaner Used on Type No(s). 0114, 0124, 0125, 0135, 0166, 0175, 0434.
718A	695178	Pin-Locating (Head)	875	695304	Base-Air Cleaner (Plastic) Used on Type No(s). 0114, 0124, 0125, 0135, 0166, 0175, 0434.	968C	791930	Cover-Air Cleaner
727	697465	Cover-Starter Drive	877	393814	Wire/Connector- Alternator	971	695181	Screw (Air Cleaner Base to Carburetor) Used on Type No(s). 0114, 0124, 0125, 0135, 0166, 0175, 0434.
732	691097	Screw (Starter Drive Cover)	877A	393456	Wire/Connector- Alternator	972	694260	Tank-Fuel (Plastic) ----- Note ----- 697779 Tank-Fuel (Plastic) Used on Type No(s). 0135.
741	691288	Gear-Timing	877C	399916	Wire/Connector- Alternator	975A	696138	Bowl-Float
742	692564	Retainer-E Ring	883	★△695398	Gasket-Exhaust	977A	696147	Gasket Set-Carburetor (Use With Nikki Carburetor)
746	694679	Gear-Idler	883A	★△697255	Gasket-Exhaust	990	691959	Key Set Used on Type No(s). 0041, 0140.
773	694258	Retainer	892	392833	Switch-Key Used on Type No(s). 0041, 0140.	990A	695756	Key Set
774	695447	Screw (Stop Wire)	892A	791944	Switch-Key	994	392390	Arrestor-Spark Used on Type No(s). 0114, 0124, 0125, 0132, 0142, 0147.
783	693713	Gear-Pinion	914	693732	Screw (Rocker Cover)	1005	694684	Fan-Flywheel
788	699078	Bracket-Fuel Pump Used on Type No(s). 0135, 0140.	918	393815	Hose-Vacuum Used on Type No(s). 0135, 0140.	1006	690452	Retainer-Fan
797	693167	Nut (Brush Retainer)	920	790951	Solenoid-Starter	1019	695442	Kit-Label
798	697890	Screw (Rocker Arm)	934	710550	Screw (Fan Retainer)	1022	690971	Gasket-Rocker Cover
799	695446	Screw (Oil Sensor) (M4) ----- Note ----- 690297 Screw (Oil Sensor) (1/4-20)	951	699961	Lever-Choke Used on Type No(s). 0157, 0158, 0167, 0168	1023	697691	Cover-Rocker
801	694482	Cap-Drive	957	694261	Cap-Fuel Tank (Plastic)	1026	695177	Rod-Push
802	691286	Cap-End	958	698180	Valve-Fuel Shut Off (Plastic)	1029	690972	Arm-Rocker
803	693757	Housing-Starter	967	491435S	Filter-Pre Cleaner	1036		Label-Emissions (Available from an Authorized Briggs & Stratton Service Dealer)
813	690635	Clamp	967A	695303	Filter-Pre Cleaner Used on Type No(s). 0114, 0124, 0125, 0135, 0166, 0175, 0434.			
832	695386	Guard-Muffler						
836	695312	Screw (Muffler Guard) (Used After Code Date 01061000) ----- Note ----- 690367 Screw (Muffler Guard) (Used Before Code Date 01061100)						
842	691031	Seal-O Ring (Dipstick Tube)						

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1046	691337	Plug-Blower Housing Used on Type No(s). 0140.	1095	695440	Gasket Set-Valve	1210	498144	Pulley/Spring Assembly (Pulley)
1051	691265	Ring-Retaining	1100	791959	Pivot-Rocker Arm			----- Note -----
1052A	790274	Sensor-Oil	1119	691183	Screw (Alternator)			698818 Pulley/Spring Assembly
1058	275092	Manual-Operator's	1127A	695407	Screw (Float Bowl)			(Pulley)
1070	691058	Screw (Flywheel Fan)	1138	694255	Nut (Control Bracket)			Used on Type No(s). 0142, 0147.
1090	691293	Retainer-Brush	1194	691876	Seal-O Ring (Plug)	1211	498144	Pulley/Spring Assembly (Spring)
								----- Note -----
								698818 Pulley/Spring Assembly (Spring)
								Used on Type No(s). 0142, 0147.
						1230	791754	Stud (Control Bracket)
						1330	272147	Repair Manual
						1404	696757	Nut (Control Cover)

★ Included in Engine Gasket Set-Ref. No.358.

● Included in Carburetor Overhaul Kit-Ref. No. 121.

◆ Included in Carburetor Gasket Set-Ref. No. 977.

△ Included in Valve Gasket Set-Ref. No 1095.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.